

# Olevia Firmware Updating Instructions

---

## What does this do?

This process installs a new version of the firmware and fixes the past bugs.

## What products does this instruction apply to?

Model: Olevia 226, 227, 232, 427, 432, 527 and 532

## What do you need before installing?

1. A compatible USB thumb drive
2. A Computer with Microsoft® Windows® 2000 or Microsoft® Windows® XP operating systems.

 
## Important Notes:

 
 
 
 
 
1. To make sure that no other files are in the thumb drive.
2. It is highly recommended to print the instructions as a reference before installing.

## Loading Instructions:

1. Review the available downloads, the bugs fixed, and the new features added.
2. Follow the instructions on the firmware download section to successfully download and load firmware into the TV.

**Note: USB thumb drive must be formatted in FAT32 for detection.**

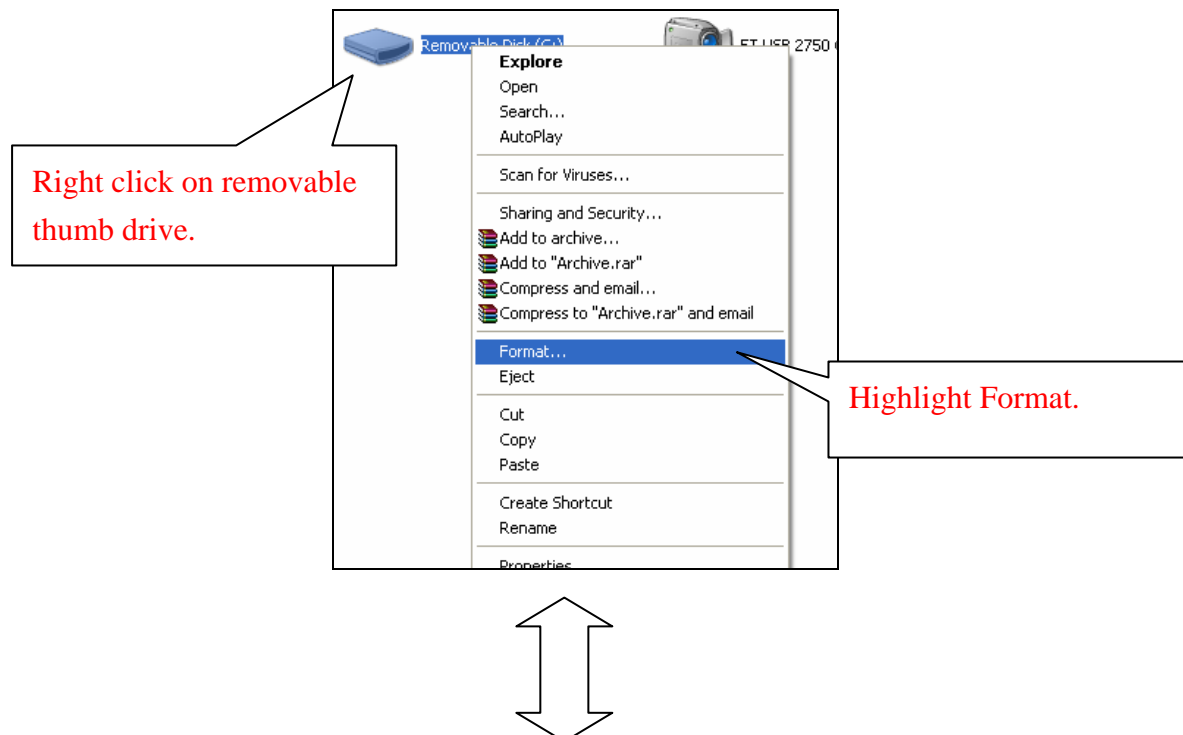

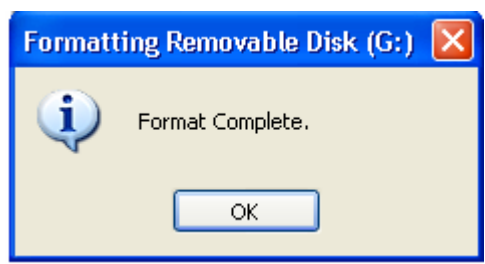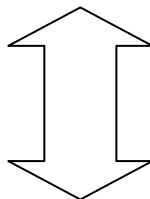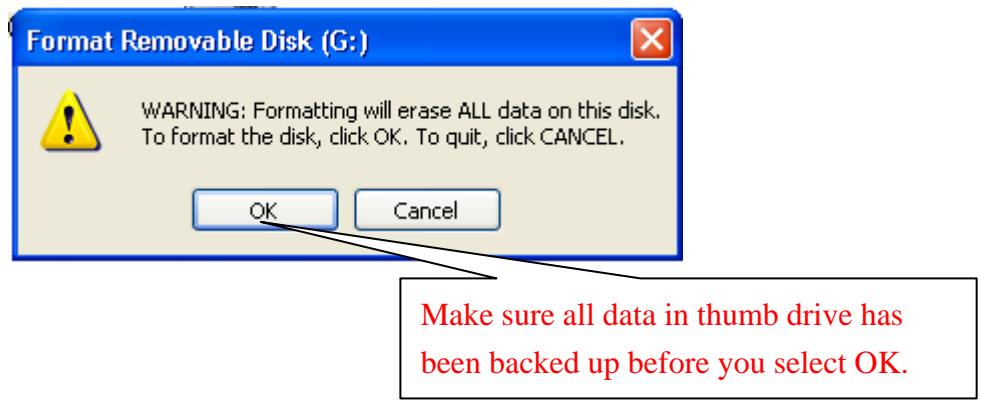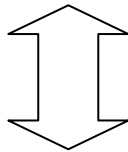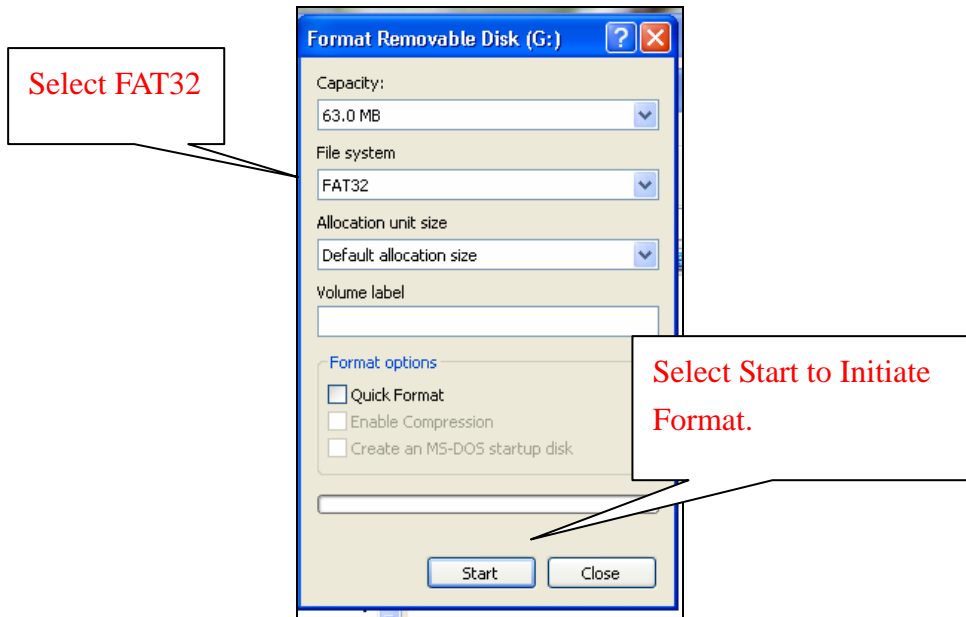

3. After you have located the firmware, download it to a thumb drive. There are five different files.
4. Turn TV off and insert the USB thumb drive into the TV's USB input.
5. Turn TV power on, OLEVIA screen will pop up and after a few seconds a blue bar will appear on the lower part of the screen covering the whole image from left to right, then a red bar.
6. Once the firmware loading is complete the TV will turn on and initial Home/Showroom option screen will appear.
7. Check under OSD menu Firmware Version and make sure that it matches with that of thumb drive. (Menu→Setup→Firmware Version)
8. Take off the thumb drive.
9. For more help, please call our technical support at 1-866-9OLEVIA (965-3842)